



Through Mount Cable Assembly


1

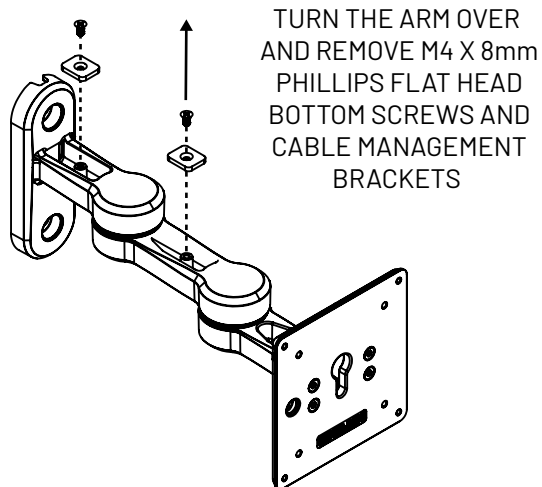

2

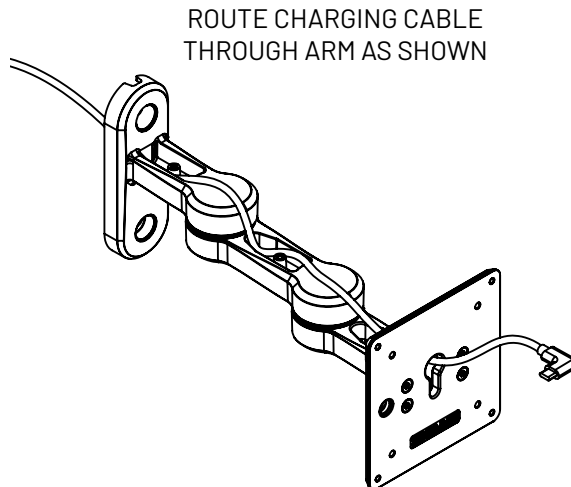


3

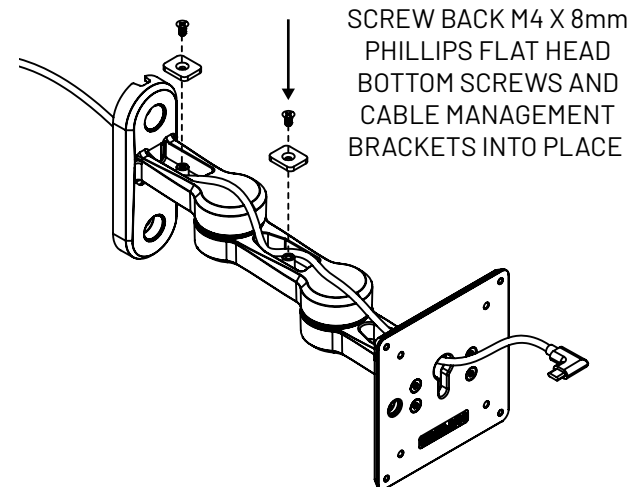


4

ADJUST CABLE LENGTH

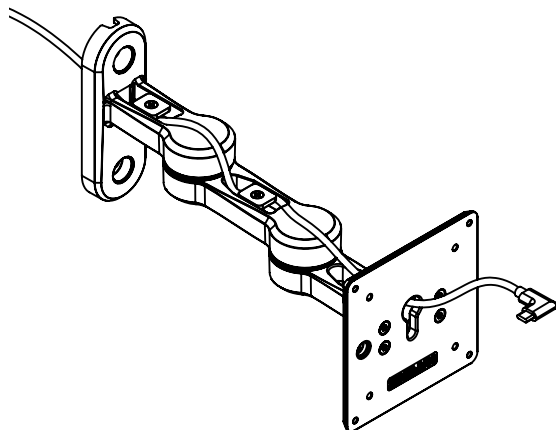


5

TURN THE ARM BACK OVER AND ROUTE
CHARGING CABLE OUT OF THE ARM
OR THROUGH THE WALL

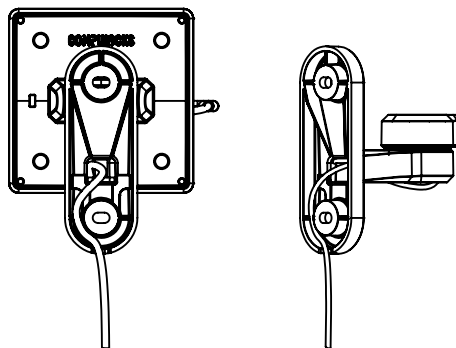


6

INSTALL THE ARM ONTO THE WALL USING
M5 X 40mm PHILLIPS PAN HEAD SCREWS (PROVIDED)
TOP SCREW FIRST AND THEN THE BOTTOM SCREW
AND THEN PLACE SCREW CAPS

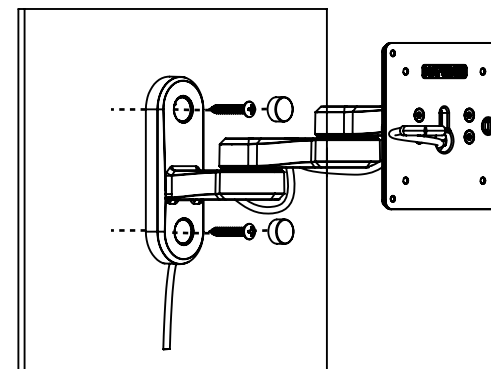


NOTE: WALL MOUNTING TO STUDS OR CONCRETE WALL


- 7** ROUTE CHARGING CABLE INTO THE ENCLOSURE OR UNIVERSAL VESA MOUNT. INSTALL ENCLOSURE/VESA MOUNT TO THE ARM USING M4 X 8mm PHILLIPS PAN HEAD SCREWS (PROVIDED)

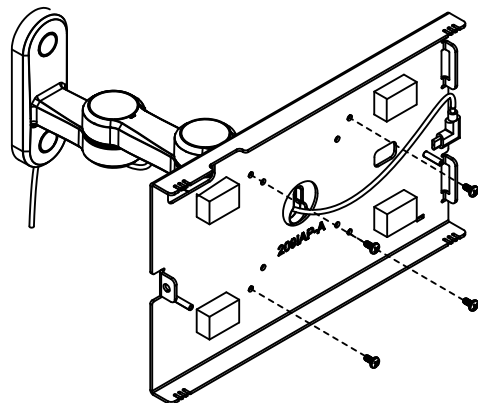

- 8** ATTACH CHARGING CABLE TO TABLET, LEAVING A SMALL LOOP OF CABLE BENEATH THE TABLET


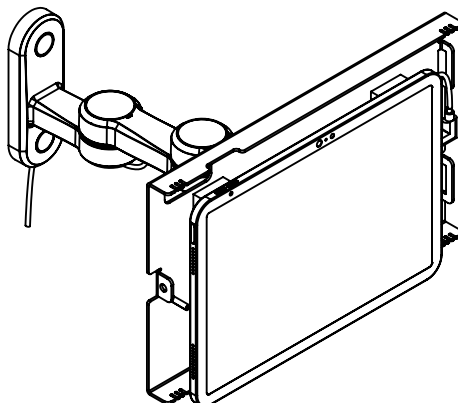


- 9** INSTALL THE ENCLOSURE TOP PLATE/VESA MOUNT PER THEIR INSTRUCTIONS

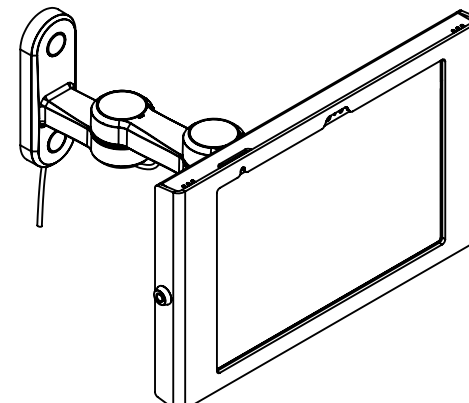

Tilt Tension Adjustments

ADJUST HINGE TENSION
USING WRENCH (PROVIDED)

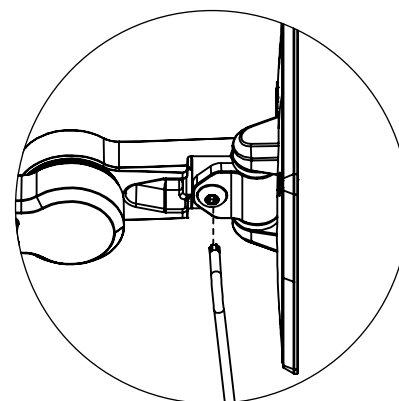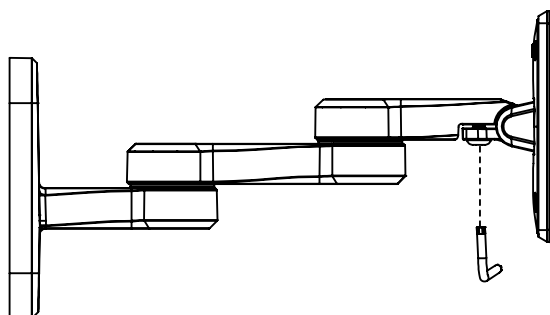

IN THE BOX



T25 TORX L-Wrench



Cable Management
Brackets



Rubber Screw Caps




M5 X 40mm
Phillips Pan Head
Screws



M4 X 8mm
Phillips Pan Head
Screws



M4 X 8mm
Phillips Flat Head
Screws

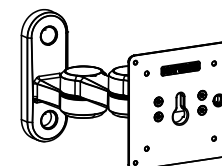


Swing Arm

PowerMove Connector

Assembly Instructions


COMPULOCKS

1

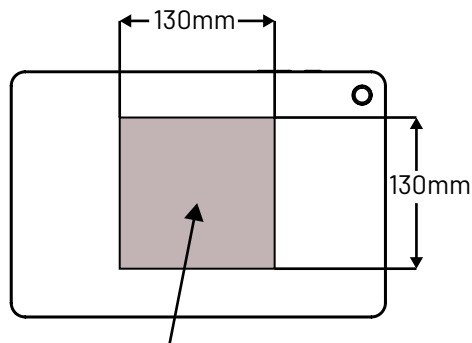


USING THE ALCOHOL WIPE PROVIDED,
CLEAN A 130mm SQUARE AREA CENTERED
ON THE BACK OF THE TABLET
AND ALLOW IT TO DRY

2

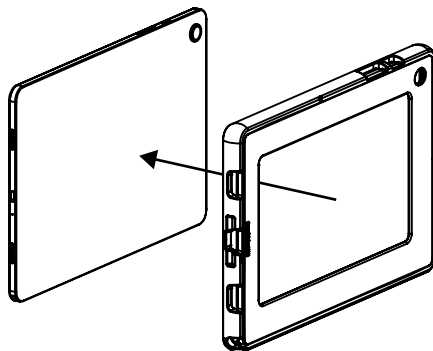

INSTALL CASE ON TABLET.
EDGE CASE SOLD SEPARATELY


3

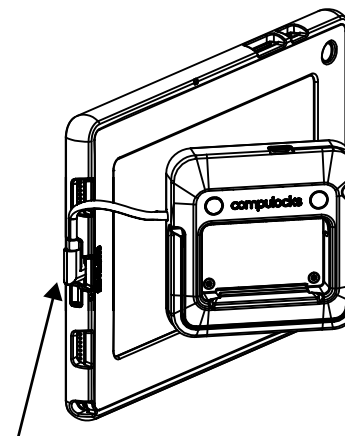

CONNECT RIGHT ANGLE USB-C CABLE
AS SHOWN, ENSURING YOUR TABLET
AND CONNECTOR ARE IN LANDSCAPE ORIENTATION

4


REMOVE COVERS TO EXPOSE
ADHESIVE ON ALL 4 PADS

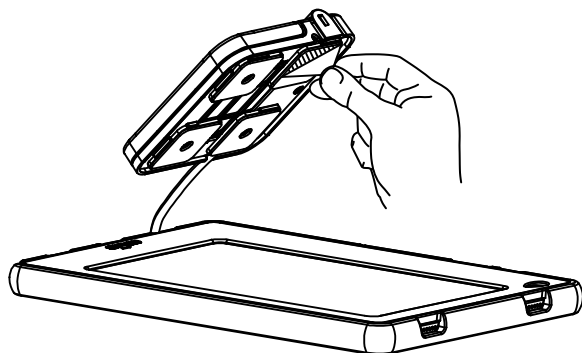

NOTE:
TABLET AND CONNECTOR SHOULD BE AT
ROOM TEMPERATURE FOR BEST RESULTS

5

CENTER CONNECTOR AND ADHERE
TO TABLET WITH MILD PRESSURE

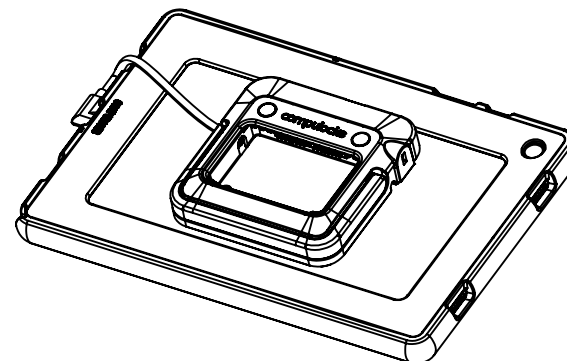


FOR BEST PERFORMANCE ALLOW
CONNECTOR TO BOND TO TABLET FOR 12 HOURS

IN THE BOX



Alcohol Wipes

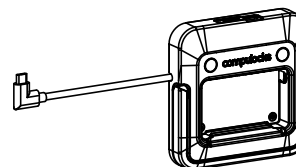

PowerMove Connector