


Swell

Assembly Instructions

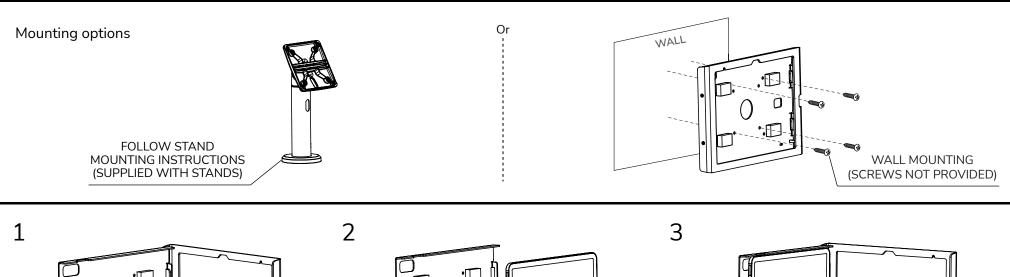


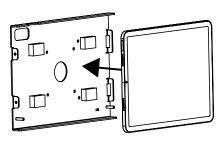


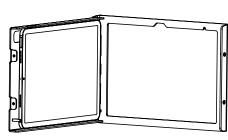



4

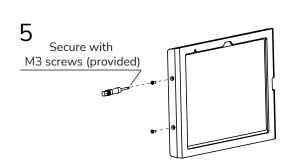

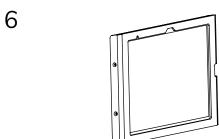


IN THE BOX



Torx Screwdriver














Wall Mounting - Wood Stud

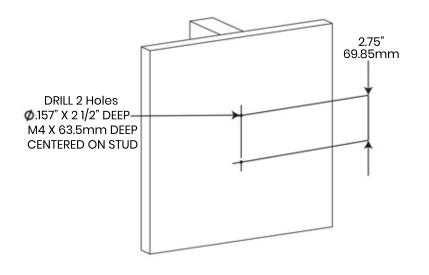


Wood Stud Istallation

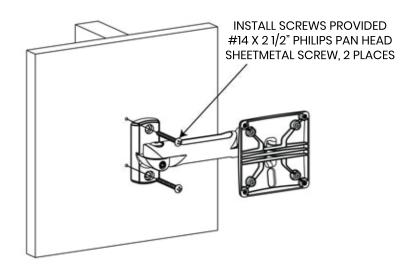


Hinge Adjustment

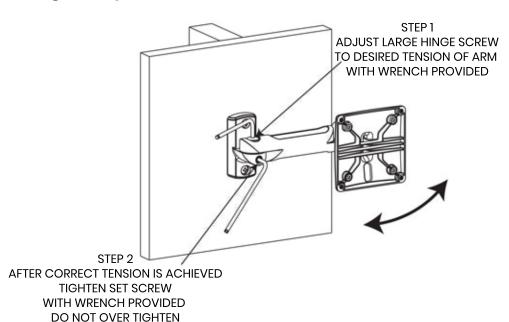

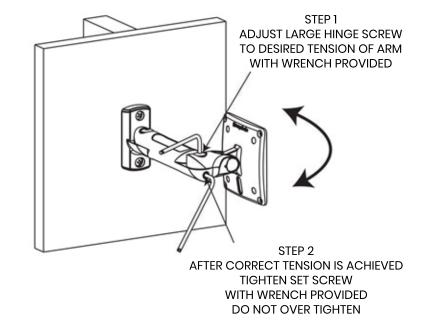




Tilt Adjustment

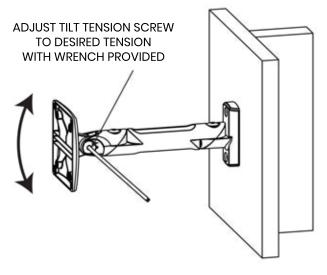

Enclosure Installation

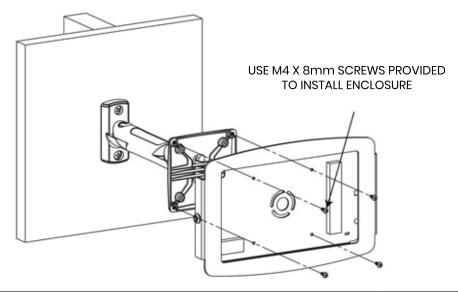

Installation Complete

