


Through Stand Cable Assembly

1


SCREW THE BOTTOM PLATE TO
THE WALL / COUNTER
WITH PHILLIPS ROUND HEAD
SCREWS - TYPE 10 X 1½" (PROVIDED).

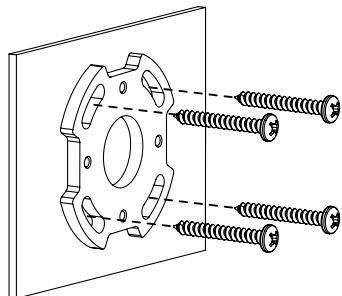

NOTE: IN A WOOD STUD INSTALLATION ENSURE
AT LEAST TWO VERTICALLY ALIGNED
SCREWS ARE SECURED INTO THE STUD.


2

REMOVE FRONT COVER.
USE T-20 TORX
WRENCH (PROVIDED)
TO REMOVE M4 X 10mm
TORX FLAT HEAD SCREWS

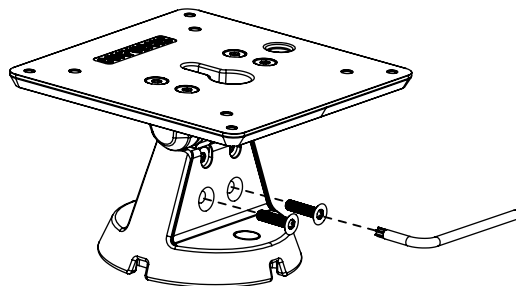


3

ROUTE CHARGING
CABLE THROUGH
MOUNT AS SHOWN

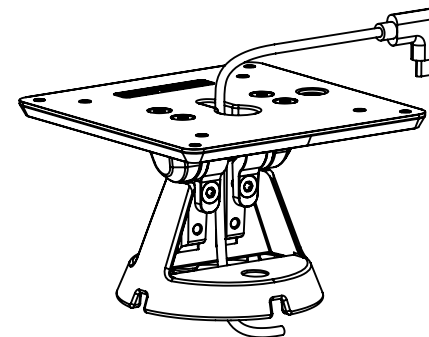


4

ROUTE CHARGING
CABLE THROUGH
MOUNT AS SHOWN

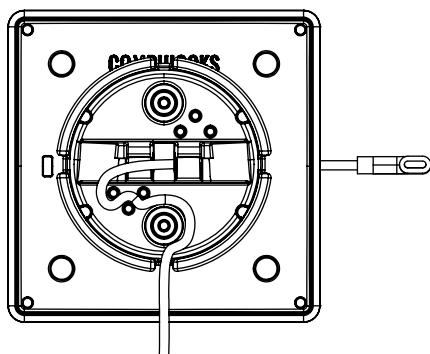


5

PLACE BOW MOUNT OVER BOTTOM PLATE
AND INSTALL USING 2 M4 X 10mm
TORX FLAT HEAD SCREWS AND WRENCH (PROVIDED).
INSTALL RUBBER PLUGS.

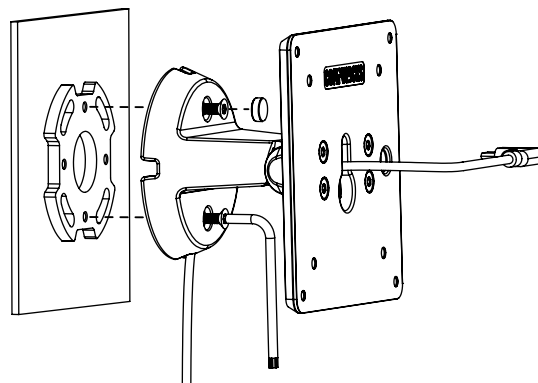


6

ROUTE CHARGING CABLE
THROUGH ENCLOSURE OR VESA MOUNT.
INSTALL TO MOUNT USING M4 X 8mm
PHILLIPS PAN HEAD SCREWS (PROVIDED)

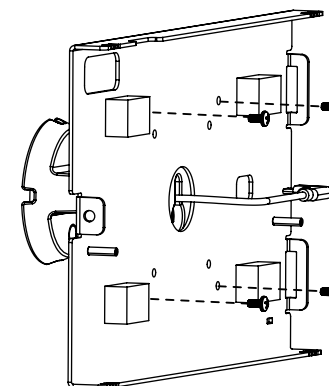


7

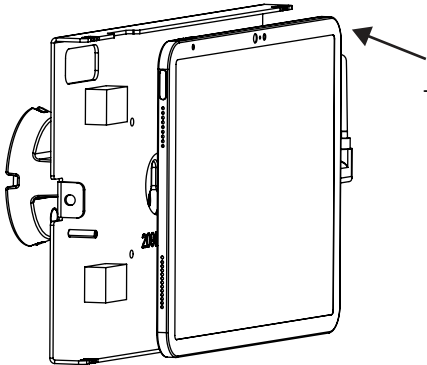



ATTACH CHARGING CABLE
TO TABLET, LEAVE A SMALL LOOP
OF CABLE BENEATH THE TABLET

8

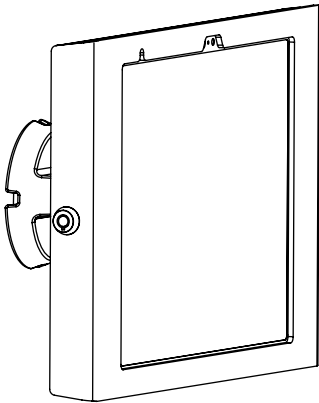

INSTALL THE REST OF THE
ENCLOSURE OR VESA MOUNT
PER THEIR INSTRUCTIONS

Tilt Tension Adjustments

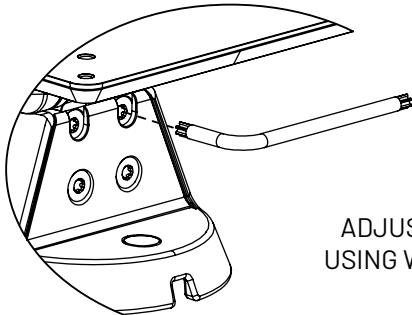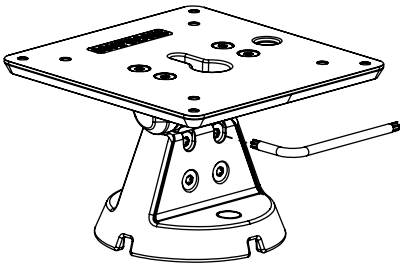


ADJUST HINGE TENSION
USING WRENCH (PROVIDED)

IN THE BOX



Bow Mount



Bottom Plate



Rubber Plugs



10 X 1 1/2" Phillips
Round Head
Screw



M4 X 10mm
Torx Flat Head
Screw



M4 X 8mm
Phillips Pan Head
Screw




T20 TORX L-Wrench

PowerMove Connector

Assembly Instructions


COMPULOCKS

1

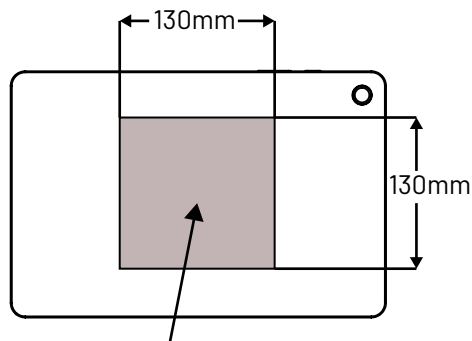


USING THE ALCOHOL WIPE PROVIDED,
CLEAN A 130mm SQUARE AREA CENTERED
ON THE BACK OF THE TABLET
AND ALLOW IT TO DRY

2

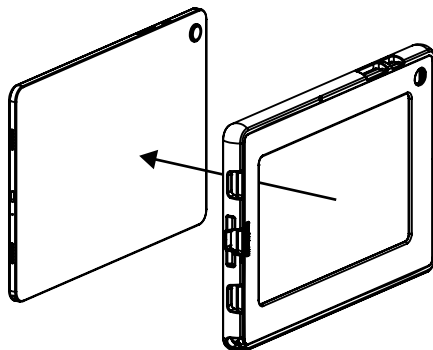

INSTALL CASE ON TABLET.
EDGE CASE SOLD SEPARATELY


3

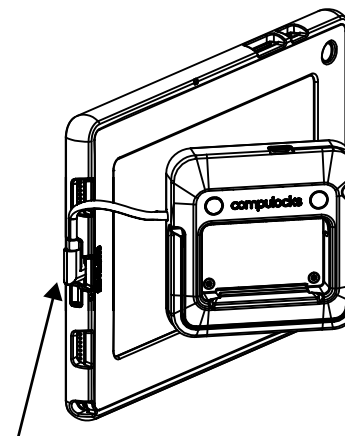

CONNECT RIGHT ANGLE USB-C CABLE
AS SHOWN, ENSURING YOUR TABLET
AND CONNECTOR ARE IN LANDSCAPE ORIENTATION

4


REMOVE COVERS TO EXPOSE
ADHESIVE ON ALL 4 PADS

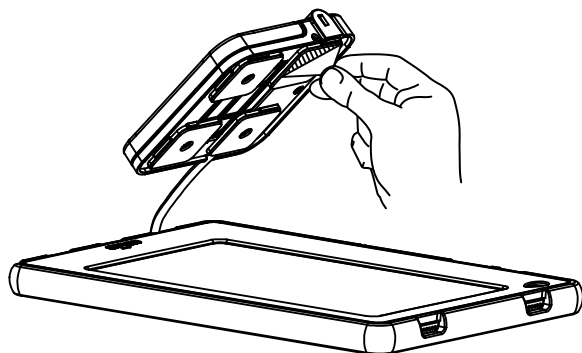

NOTE:
TABLET AND CONNECTOR SHOULD BE AT
ROOM TEMPERATURE FOR BEST RESULTS

5

CENTER CONNECTOR AND ADHERE
TO TABLET WITH MILD PRESSURE

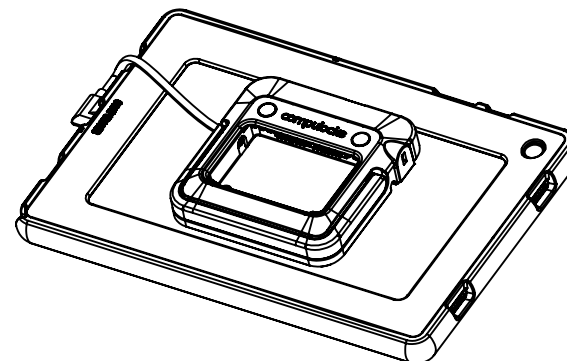


FOR BEST PERFORMANCE ALLOW
CONNECTOR TO BOND TO TABLET FOR 12 HOURS

IN THE BOX



Alcohol Wipes

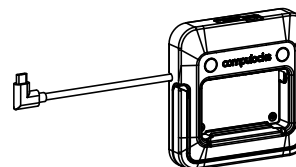

PowerMove Connector